

entone remote control



Registration and programming procedures

Hydra HD Channel Settings:

TV #1	Channel 10
TV #2	Channel 23
TV #3	Channel 39

Technical Data

Programming codes entered:

TV #1	
TV #2	
TV #3	



etex

ETEX Telephone Co-operative, Inc.
Gilmer, TX 75644


Business Office 903-797-2711
Repair 903-797-2717

Registration Procedure

Entone has introduced a new and simpler Remote Control registration method via Radio Frequency. To register the remote control to the Entone receiver box, do the following

1. **Ensure the Hydra box is turned on** and the remote control antenna is installed.
2. **Press and hold the ENTER (OK) button** on the Hydra front panel for approximately 5 seconds. When releasing the **ENTER (OK)** button, the front panel LED blinks red and green alternatively twice then remains red.

The Hydra is now in remote registration mode. "RC REG" will be displayed on the front LED display.

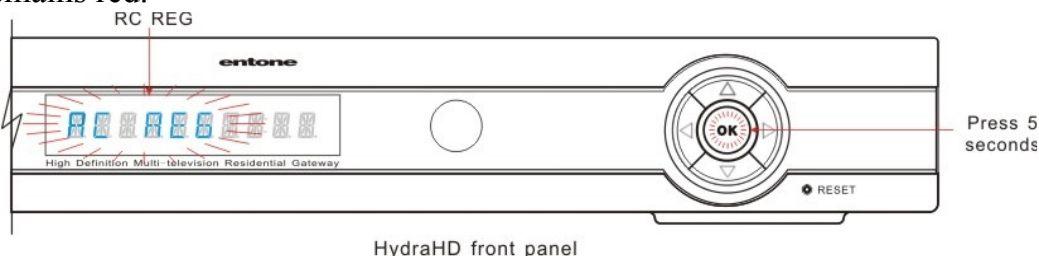

3. **On the remote control handset, press and hold the STB button** on the remote control for approximately 5 seconds. The **STB LED** will illuminate. **On the URC PLUS, press "STB" once again. Both the "STB" and "AUX" buttons will illuminate.** The remote control handset is now in registration mode.

4. **Using the number keypad** on the remote, press

**"1" to "Register remote control to Decoder "1"
"2" to "Register remote control to Decoder "2"
"3" to "Register remote control to Decoder "3"**

Pressing a key other than "0", "1", "2" or "3" will cause the STB LED to extinguish. If a button isn't pressed within 10 seconds the STB LED will extinguish and the remote control registration will be terminated.

5. **The STB LED** on the remote control handset will blink twice to indicate that the registration process was successful. When Hydra receives the remote registration event (i.e., event "0", "1", "2", or "3"), the front panel LED will blink showing the successful registration event. If Hydra does not receive any remote registration event within 30 seconds, the process will be terminated and the front panel LED turns from Red to Green.



To manually program the TV

Locate the device code for your desired device in the device code table or obtain them from your installer. For future reference, you can record your device codes here or on this guide's cover:


TV #1 _____ TV #2 _____ TV #3 _____

If you could not find the device code for your device or it does not work after trying the listed device codes for your device brand, then you can go to the next section to try the auto-search procedures.

Turn on your device and have media inserted (if applicable) then, on the remote control:

1. **Press a device mode key once** (i.e., "TV"). **NOTE:** Use the "AUX" mode key to program control of VCR, DVD player, cable box, satellite set-top-box and audio device.

2. **Press and hold the "SETUP" key** until the selected mode key ("TV") blinks twice, then release "SETUP". The device mode key will light up.

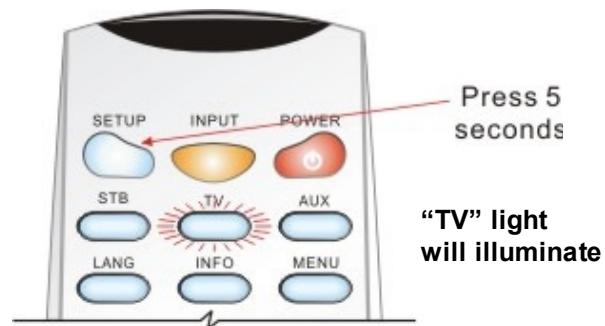

3. **Enter the four-digit device code** for your device. If you perform this procedure correctly, the selected device mode key will blink twice. **NOTE:** If you enter an invalid device code, the selected device mode key will fast blink 7 times. Then, the device program mode will be terminated.

4. **Aim the remote control at your device and press "POWER" once.** The device should turn off. If it does not respond, repeat the above steps for the other codes.

Auto-search programming procedure

If your device does not respond to the remote control after trying all device codes listed for your brand, or if your brand is not listed at all, try searching for your device code as follows:

1. **Press the desired device key once** ("TV"). **Then press and hold "SETUP" until the device key blinks twice**, then release "SETUP".

2. **Press the "POWER" key once** and aim your new remote at the device.

3. **Press either the "CHANNEL UP" key or "CHANNEL DOWN" key** to do the device auto-scan. In this search mode, the remote control will send IR codes from the library in 5-second intervals. The device key will be on and blink every 5 seconds while in the device scan mode. **If the device turns off, a working code has been found. Press "OK" once** to lock in the code. The selected mode key will blink twice. If all code sets of that device are exhausted in the search and the "OK" is not pressed, the selected device key will fast blink 7 times and the search mode will be terminated.